

Replacement Biscuit Manual

Note: Please read through the instructions before starting to install your replacement biscuit. It is advised that this installation is done by an Archery Pro Shop for the safety of you and your equipment. Please call us if you have further questions on the installation of this product or the warranties Trophy Ridge (TR) offers.

Removing the old biscuit

1. Remove the arrow rest from your bow.
*(Tip) – It is helpful to mark the location of your biscuit before removing to aid in re-assembly.
2. Remove the rubber boots from the open end of the biscuit.



3. Loosen the two set screws on the biscuit ring.
4. Rotate the bristles roughly 180 degrees.
5. Cut the biscuit in half using wire cutters.



6. Remove and discard all pieces of the biscuit.

To install the new biscuit

7. Place the biscuit in the top groove.
(make sure to keep the black bristles at the 6 o'clock position)



8. Press with your right thumb toward the center of the biscuit & down while slightly compressing the biscuit to the center with the left thumb. *Do not compress hard enough to deform the biscuit.
9. Work your way around in a circular, clockwise, motion while still pressing toward the middle with your left thumb.



10. The biscuit will snap into place.



11. Rotate the biscuit until the black bristles are centered in the bottom of the rest.
12. Tighten the set screws.
13. Install the rubber boots using a drop of super glue.
14. Install the arrow rest on your bow.
15. Adjust center shot and/or nocking point as necessary.

Warranty: Trophy Ridge warrants all products from defects in manufacturing. If you must return for warranty repair, you must have a return authorization number. Please call TR for the return authorization number. TR is not responsible for personal/property damage to you or others due to any misuse or abuse of the product.

Trophy Ridge
800-694-9494 -- customercare@trophyridge.com
2L-7155-00